


Installation Guide for *ecoBETA*[®] Flushing Valve Type EUROPA

Step 1

Close water supply
Remove water supply hose
Remove water tank

Step 2


Measure the height of the water tank "H"

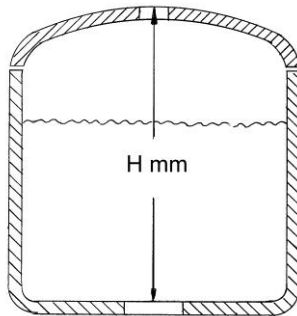

H water tank	visible holes	number of sections to cut off
mm		
295 - 310	1	6
305 - 320	2	5
315 - 330	3	4
325 - 340	4	3
335 - 350	5	2
345 - 360	6	1
355 - 370	7	none
356 - 380	8	none
375 - 390	9	none
385 - 400	10	none


Step 3

Cut off the same number of sections from the guiding rod and the valve shaft so far necessary see table
Use a small saw.
Put the funnel on top of the valve shaft
Put the clip on top of the guiding rod

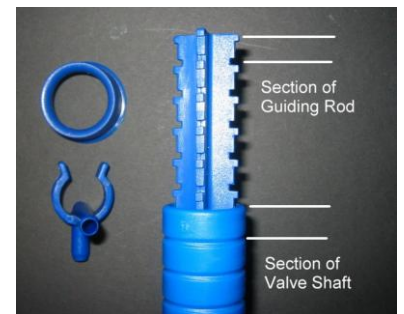

Step 4

Adjust bow position to the right number of visible holes see table

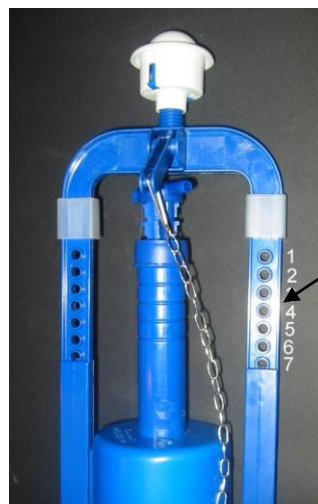

visible holes

Step 5

Adjust the chain
No more slack as necessary for closing the valve properly

